# ILLUSTRATED PARTS






1995

Garden Tractors 820-829; 840-849 Series

# Models 820 and 840 (Style 0)

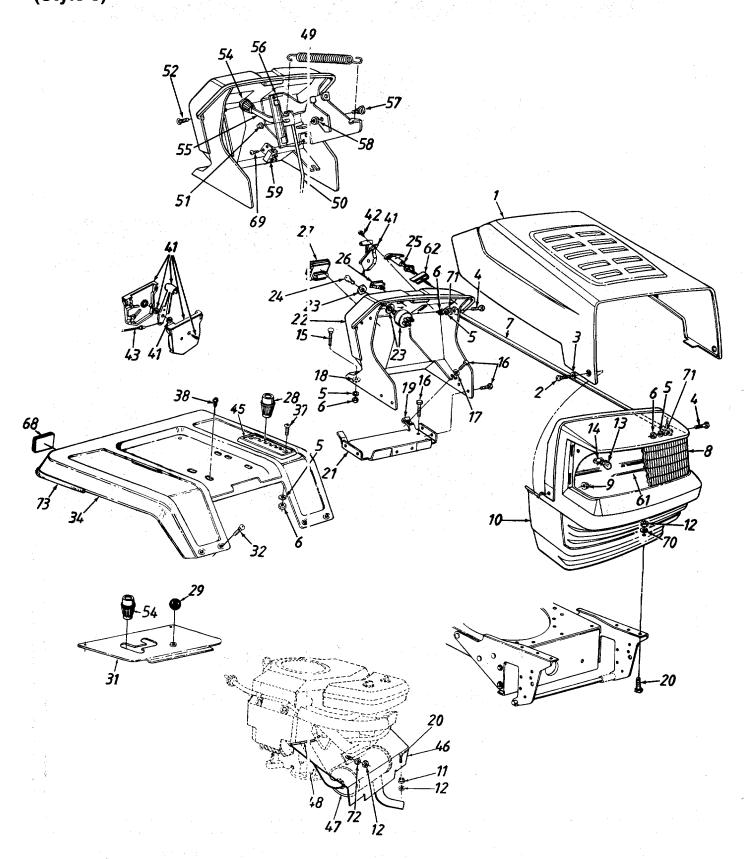

4A – Page 2


#### **Models 820 and 840**

#### PARTS LIST FOR MODELS 820 AND 840 TRACTORS

	DADT			3 020			
REF. NO.	PART NO.	CODE	DESCRIPTION	REF. NO.	PART NO.	CODE	DESCRIPTION
1	783-0250		Hood	32	710-0167		Carriage Bolt 1/4-20 x .5" Lg.
2	738-0724		Shld. Bolt .375" Dia. x .125" Lg.	34	17426A		Fender
3	736-0175		Spr. Wash265" I.D. x .562"	37	710-0166		Truss Mach. Scr. #1/4-20 x 1"
	740 0050		O.D.				Lg.
4	710-0258		Hex Bolt 1/4-20 x .62" Lg.*	38	710-0726		Hex Wash. Hd. AB-Tap Scr.
5	736-0329		L-Wash. 1/4" I.D.*				5/16 x .75" Lg.
6	712-0287		Hex Nut 1/4-20 Thd.*	41	831-0823A		Throttle Box Ass'y.
7	749-0813A		Grille Support Rod	42	710-0779A		Truss Mach. AB-Tap Scr. #10 x
8	731-1099A		Headlight Lens				.5" Lg.
9	712-0380		Flange L-Nut 1/4-28 Thd.	43	746-0634		Throttle Control Wire
10	731-1097B		Grille	45	731-1360		6-Speed Selector Plate (820)
11	736-0119		L-Wash. 5/16" I.D.*		731-1071		7-Speed Selector Plate (840)
12	712-0267		Hex Nut 5/16-18 Thd.*	46	16934		Front Heat Shield
13	725-0963		Lamp	47	751-0474		Muffler
14	725-1649		Socket	48	731-0511-1	2	Trim Strip 12" Lg.
15	710-0932		Carriage Bolt 1/4-20 x 1.0" Lg.	49	732-0626		Ext. Spring 5.06" Lg.
16	710-0776A		Hex AB-Tap Scr. 1/4 x .62" Lg.	50	747-0750		Deck Control Rod
17	736-0173		FI-Wash281" I.D. x .73" O.Ď.	51	726-0106		Speed Nut 1/4" Rod
18	726-0233		Bolt Retainer 1/4" I.D.	52	710-1017		Torx Mach. Scr. 1/4 x .62" Lg.
19	712-0185		Speed Nut 1/4-20 Thd.	54	720-0232		PTO Knob
20	710-0118		Hex Bolt 5/16-18 x .75" Lg.	55	17500		PTO Lever
21	17634		Support Brkt.	56	17496A		PTO Bracket
22	731-1094B		Dash—w/Ammeter & Light	57	738-0155		Shld. Bolt .437" Dia. x .162"
			Switch Holes	58	712-3009		Hex L-Nut 5/16-18 Thd.
	731-1095B		Dash-w/o Ammeter & Light	59	725-0465A		Safety Switch (PTO)
			Switch Holes	61	777-9206		Grille Reflector Label
23	725-0267		Ignition Switch	62	17782		Retainer Clip
24	725-0201		Ignition Key	68	730-3000		Reflector (Optional)
25	746-0614A		Choke Control	69	710-1066		Hex Wash. Hd. B-Tap Scr.
26	725-0634		Light Switch (Optional)				#10 x .38" Lg.
27	725-0925		Ammeter (Optional)	70	736-3078		Fl-Wash344" I.D. x 1" O.D.
28	720-0218		Shift Knob	71	736-0342		Fl-Wash28" I.D. x .75" O.D.
29	720-0166		Knob	72	736-0170		Spec. L-Wash. 5/16" I.D.
31	783-0245A	Ν	Shift Cover	73	731-0511-8	1	Trim Strip 81" Lg.

<sup>\*</sup>For faster service obtain standard nuts, bolts and washers locally. If these items cannot be obtained locally, order by part number and size as shown on parts list.

#### Models 825 and 845

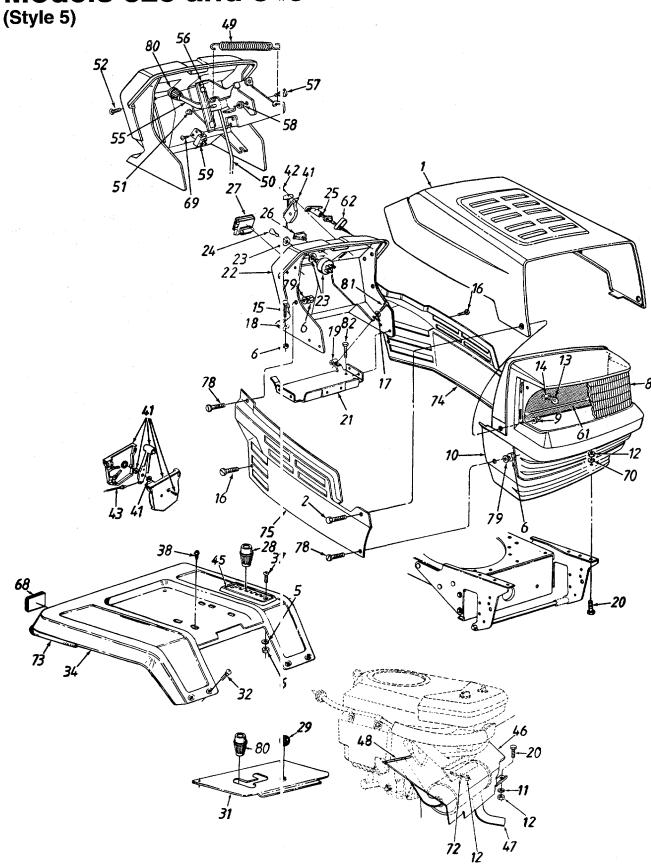


#### **Models 825 and 845**

#### PARTS LIST FOR MODELS 825 AND 845 TRACTORS

			PARTS LIST FOR WIODELS		71.10 0 10 111	7.0.0.	···
REF. NO.	PART NO.	CODE	DESCRIPTION	REF. NO.	PART NO.	CODE	DESCRIPTION
1	783-0250		Hood	41	831-0823A		Throttle Box Ass'y.
2	738-0724		Shld. Bolt .375" Dia. x .125" Lg.	42	710-0779A		Truss Mach. AB-Tap Scr. #10 x
5	736-0329		L-Wash. 1/4" I.D.*		, , , , , , , , , , , , , , , , , , , ,		.5" Lg.
6	712-0287		Hex Nut 1/4-20 Thd.*	43	746-0634		Throttle Control Wire
8	731-1099A		Headlight Lens	45	731-1360		6-Speed Selector Plate (825)
9	712-0380		Flange L-Nut 1/4-28 Thd.		731-1071		7-Speed Selector Plate (845)
10	731-1097B		Grille	46	16934		Front Heat Shield
11	736-0119		L-Wash. 5/16" I.D.*	47	751-0474		Muffler
12	712-0267		Hex Nut 5/16-18 Thd.*	48	731-0511-1	2	Trim Strip 12" Lg.
13	725-0963		Lamp	49	732-0626		Ext. Spring 5.06" Lg.
14	725-1649		Socket	50	747-0750		Deck Control Rod
15	710-0932		Carriage Bolt 1/4-20 x 1.0" Lg.	51	726-0106		Speed Nut 1/4" Rod
16	710-0599		Hex Wash. Hd. TT-Tap Scr.	52	710-1017		Torx Mach. Scr. 1/4 x .62" Lg.
			1/4-20 x .5" Lg.	55	17500		PTO Lever
17	736-0173		Fl-Wash281" I.D. x .73" O.D.	56	17496A		PTO Bracket
18	726-0233		Bolt Retainer 1/4" I.D.	57	738-0155		Shld. Bolt .437" Dia. x .162"
19	712-0185		Speed Nut 1/4-20 Thd.	58	712-3009		Hex L-Nut 5/16-18 Thd.
20	710-0118		Hex Bolt 5/16-18 x .75" Lg.	59	725-0465A		Safety Switch (PTO)
21	17634		Support Brkt.	61	777-9206		Grille Reflector Label
22	731-1094B		Dash-w/Ammeter & Light	62	17782		Retainer Clip
			Switch Holes	68	730-3000		Reflector (Optional)
	731-1095B		Dash—w/o Ammeter & Light Switch Holes	69	710-1066		Hex Wash. Hd. B-Tap Scr. #10 x .38" Lg.
23	725-0267		Ignition Switch	70	736-3078		Fl-Wash344" I.D. x 1" O.D.
24	725-0201		Ignition Key	72	736-0170		Spec. L-Wash. 5/16" I.D.
25	746-0614A		Choke Control	73	731-0511-8	1	Trim Strip 81" Lg.
26	725-0634		Light Switch (Optional)	74	783-0151	1	Side Panel—L.H.
27	725-0925		Ammeter (Optional)	75	783-0150A		Side Panel—R.H.
28	720-0218		Shift Knob	78	710-0286		Pan Hd. Mach. Scr. 1/4-20 x .5"
29	720-0166		Knob				Lg.
31	783-0245A	N	Shift Cover	79	736-0270		Bell-Wash. 1/4" I.D.
32	710-0167		Carriage Bolt 1/4-20 x .5" Lg.	80	720-0232		Small Shift Knob
34	17426A		Fender	81	710-0642		Hex TT-Tap Scr. 1/4-20 x .75"
37	710-0166		Truss Mach. Scr. #1/4-20 x 1"				Lg.
			Lg.	82	710-0776A		Hex AB-Tap Scr. 1/4 x .62" Lg.
38	710-0726		Hex Wash. Hd. AB-Tap Scr. 5/16 x .75" Lg.				·

<sup>\*</sup>For faster service obtain standard nuts, bolts and washers locally. If these items cannot be obtained locally, order by part number and size as shown on parts list.

## Models 828 and 848 (Style 8)

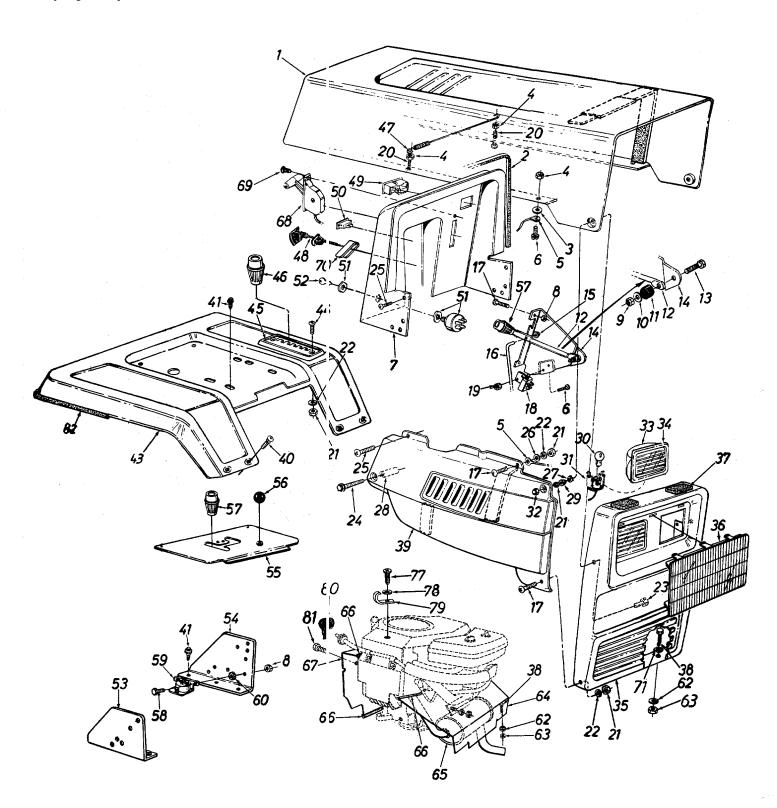

#### **Models 828 and 848**

#### PARTS LIST FOR MODELS 828 AND 848 TRACTORS


	r	1	PARTS LIST FOR MODELS				
REF. NO.	PART NO.	CODE	DESCRIPTION	REF. NO.	PART NO.	CODE	DESCRIPTION
1	16787A	1	Hood	40	710-0167		Carriage Bolt 1/4-20 x .5" Lg.
2	731-0511-3	31	Trim Strip 31" Lg.	41	710-0726		Hex Wash. AB-Tap Scr. 5/16 x
3	736-0931	1	Fl-Wash20" I.D. x .41" O.D.	71	710-0720		.75" Lg.
4	712-0272		Hex Sems Nut #10-24 Thd.	42	731-0511-8	! ! <b>1</b>	Trim Strip—81" Lg.
5	727-0290		Hood Stop	43	17426A	, <b>1</b> 	Fender
6	710-0473	İ	Truss Mach. Scr. #10-24 x .5"	44	710-0166		Truss Mach. Scr. 1/4-20 x 1" Lg.
			Lg.	45	731-1360		6-Speed Selector Plate (828)
7	16550A		Dash Ass'y. w/Ammeter Hole	"	731-1071		7-Speed Selector Plate (848)
	17998		Dash Ass'y. w/o Ammeter Hole	46	720-0218		Shift Knob
8	712-0271		Hex Sems Nut 1/4-20 Thd.	47	732-0462		Hood Spring
9	712-0324		Hex L-Nut 1/4-20 Thd.	48	746-0613A		Choke Control 46" Lg.
10	736-0173		Fl-Wash281" I.D. x .73" O.D.	49	725-0925		Ammeter†
11	735-0126		Rubber Washer	50	725-0634		Light Switch†
12	747-0513		PTO Lever	51	725-0267		Ignition Switch
13	710-0106		Hex Bolt 1/4-20 x 1.25" Lg.*	52	725-0201		Ignition Key
14	13950A		Deck Clutch Control Brkt.	53	17293B		Dash Support Brkt.—R.H.
15	726-0106		Push Cap	54	17294B		Dash Support Brkt.—L.H.
16	747-0307		Deck Control Rod	55	783-0245A	N	Transmission Cover
17	710-0286		Truss Mach. Scr. 1/4-20 x .5" Lg.	56	720-0166		Ball Knob
18	725-0465A		Safety Switch	57	720-0232		KnobBlade Clutch
19	712-0272		Hex Sems Nut #10-24 Thd.	58	710-0289		Hex Bolt 1/4-20 x .5" Lg.
20	710-0749		Hex Bolt 10-24 x 1.0" Lg.	59	725-1426		Solenoid
21	712-0287		Hex Nut 1/4-20 Thd.*	60	736-0222		Ext. L-Wash. 1/4" I.D.
22	736-0329		L-Wash. 1/4" I.D.*	62	736-0119		L-Wash. 5/16" I.D.*
23	710-0206		Hex Bolt 1/4-20 x .88" Lg.*	63	712-0267		Hex Nut 5/16-18 Thd.*
24	710-1026		Hex Wash, TT-Tap Scr. 1/4-20 x	64	16934		Front Heat Sheild
			1.75" La.	65	751-0474		Muffler
25	710-0642		Hex TT-Tap Scr. 1/4-20 x .75" Lg.	66	731-0511-1	2	Trim Strip 12" Lg.
26	736-0463		FI-Wash25" I.D. x .62"	67	16989A	_	Rear Baffle
27	736-0413		Spr. Wash39" I.D. x .62"	68	831-0823A		Throttle Control Box Ass'y.
28	750-0768		Spacer .26" I.D. x .375"	69	710-0779A		Truss Mach. AB-Tap Scr.
29	738-0759		Shld. Spacer .375" Dia. x .125"	-	·		#10 x .5" Lg.
			Lg.	70	17782		Retainer Clip
30	725-0963		Lamp	71	736-3078		FI-Wash344" I.D. x 1" O.D.
31	725-1650		Socket				(Hdn.)
32	712-0264		Acorn Nut 1/4-20 Thd.	77	710-0351		Truss Mach. B-Tap Scr. #10 x .5"
33	731-0705		Headlight Housing				Lg.
34	731-0706		Headlight Lens†	78	736-3067		Fl-Wash188" I.D. x .438" O.D.
35	15806B		Grille	79	726-0272		Clamp
00	16456B		Grille—Used w/Headlight Bezel	80	725-3008		Boot
36	731-0967		Headlight Bezel†	81	710-0599		Hex Wash Hd. TT-Tap Scr.
37	722-0157		Foam Strip				1/4-20 x .5" Lg.
	710-0118		Hex Bolt 5/16-18 x .75" Lg.	82	731-0511-8	1	Trim Strip 81" Lg.
39	17458A		Side Panel Ass'y.—R.H.				- -
	17459A		Side Panel Ass'y.—L.H.			}	
			(Not Shown)				

#### †Optional Parts

\*For faster service obtain standard nuts, bolts and washers locally. If these items cannot be obtained locally, order by part number and size as shown on parts list.

#### **Models 829 and 849**

(Style 9)

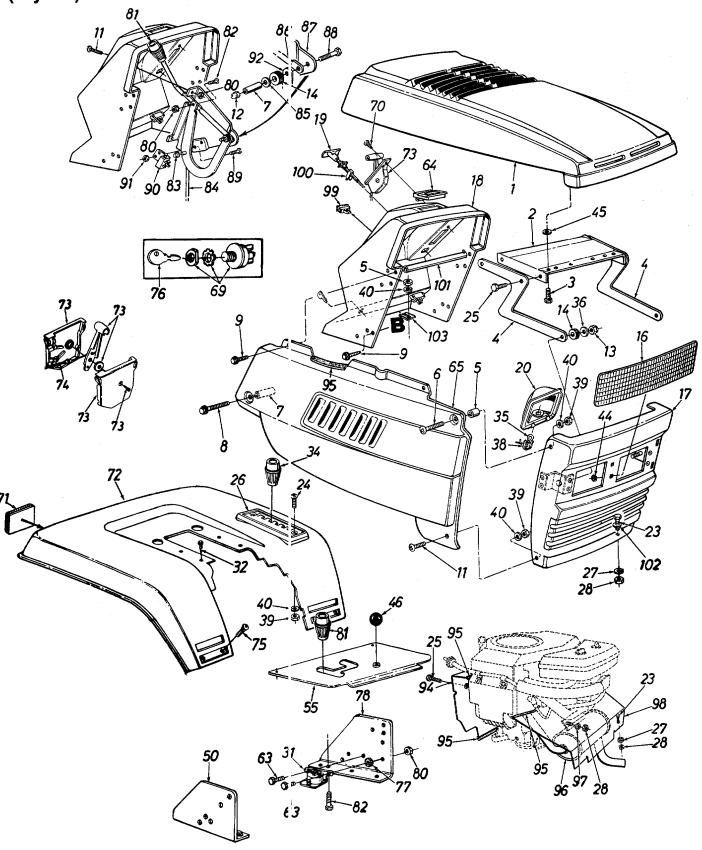


#### **Models 829 and 849**

#### PARTS LIST FOR MODELS 829 AND 849 TRACTORS

DEE	DADT			T	T T		T
REF. NO.	PART NO.	CODE	DESCRIPTION	REF. NO.	PART NO.	CODE	DESCRIPTION
1	731-1491		Hood (Red)	50	17293B		Dash Support Brkt.—R.H.
	731-1531		Hood (Charcoal Gray)	55	783-0245A	N	Transmission Cover
2	16903A		Hood Plate	63	710-0289		Hex Bolt 1/4-20 x .5" Lg.
3	710-1005		Hex Wash. Hd. Tap Scr. 1/4 x .5"	64	725-0925		Ammeter
			Lg.	65	17458A		Side Panel Ass'y.—R.H.
4	783-0190		Hood Hinge		17459A		Side Panel Ass'y.—L.H.
5	750-0768		Spacer .34" I.D. x .437"	69	725-0267		Ignition Switch
6	710-0166		Truss Hd. Mach. Scr. 1/4-20 Thd.	70	710-0779A		Truss Mach. AB-Tap Scr.
7	750-0583		Spacer .26" I.D. x .375"		' ' ' ' ' ' ' ' '		#10 x .5" Lg.
8	710-1026		Hex Wash. TT-Tap Scr.	71	730-3000		Reflector (Optional)
			1/4-20 x 1.75" Lg.	72	17330A		Rear Fender
9	710-0642		Hex T-Tap Scr. 1/4-20 x .75"	73	831-0823A		Throttle Control Box Ass'y.
			Lg.	74	746-0634		Throttle Control Wire 35" Lg.
11	710-0286		Truss Mach. Scr. 1/4-20 x .5" Lg.	75	710-0167		Carriage Bolt 1/4-20 x .5" Lg.
12	712-0324		Hex Ins. L-Nut 1/4-20 Thd.	76	725-0201		Key
13	712-0429		Hex L-Nut 5/16-18 Thd.	77	736-0222		Ext. L-Wash. 1/4" I.D.
14	735-0126		Rubber Washer	78	17294B		Dash Support Brkt.—L.H.
16	731-1044	i	Headlight Lens	80	712-0271		Hex Sems Nut 1/4-20 Thd.
17	17410		Grille Ăss'y.	81	720-0232		Knob
18	731-1046A		Dash Ass'y.	82	710-0258		Hex Bolt 1/4-20 x .62" Lg.
19	746-0614A		Choke Control	83	726-0106		Push Nut
20	731-0705		Headlight Housing	84	16985		PTO Rod
23	710-0118		Hex Bolt 5/16-18 x .75" Lg.	85	736-0173		Fl-Wash281" I.D. x .73"
24	710-0924		Truss Mach. Scr. 1/4-20 x .75"	86	16984		PTO Lever
			Lg.	87	12476		Deck Clutch Control Brkt.
25	710-0599		Hex Wash. Hd. Scr. 1/4" x .5" Lg.	88	710-0102		Hex Bolt 1/4-20 x 2.5" Lg.
26	731-1360		6-Speed Selector Plate (829)	89	710-0473		Truss Mach. Scr. #10-24 x .5"
_	731-1069		7-Speed Index Brkt. (849)				Lg.
27	736-0119		L-Wash. 5/16" I.D.*	90	725-0465A		Safety Switch
28	712-0267		Hex Nut 5/16-18 Thd.*	91	712-0121		Hex Nut #10-24 Thd.
	725-1426		Solenoid	92	16983		PTO Bracket
32	710-0726		Hex Hd. Rolling Scr. 5/16-24 x	94	16989A		Engine Baffle
		j	.75" Lg.	95	731-0511-12	2	Trim Strip 12" Lg.
	720-0218		Shift Knob	96	751-0474		Muffler
	725-0963		Lamp	97	736-0170		Spec. L-Wash. 5/16" I.D.
	736-0242		Bell-Wash34" I.D. x .87"	98	16934		Front Heat Shield
	725-1650		Socket	99	725-0634		Light Switch
	712-0287		Hex Nut 1/4-20 Thd.*	100	17782		Retainer Clip
	736-0329	ĺ	L-Wash. 1/4" I.D.*	101	749-0814		Dash Support Tube
	726-0201	ļ	Speed Nut 5/16" I.D.	102	736-3078		Fl-Wash344" I.D. x 1" O.D.
	736-3010	1	Fl-Wash406" I.D.	103	783-0013		Dash Panel Fastening Tab
46	720-0166		Ball Knob	104	777-8568A	į	Chome Label

<sup>\*</sup>For faster service obtain standard nuts, bolts and washers locally. If these items cannot be obtained locally, order by part number and size as shown on parts list.

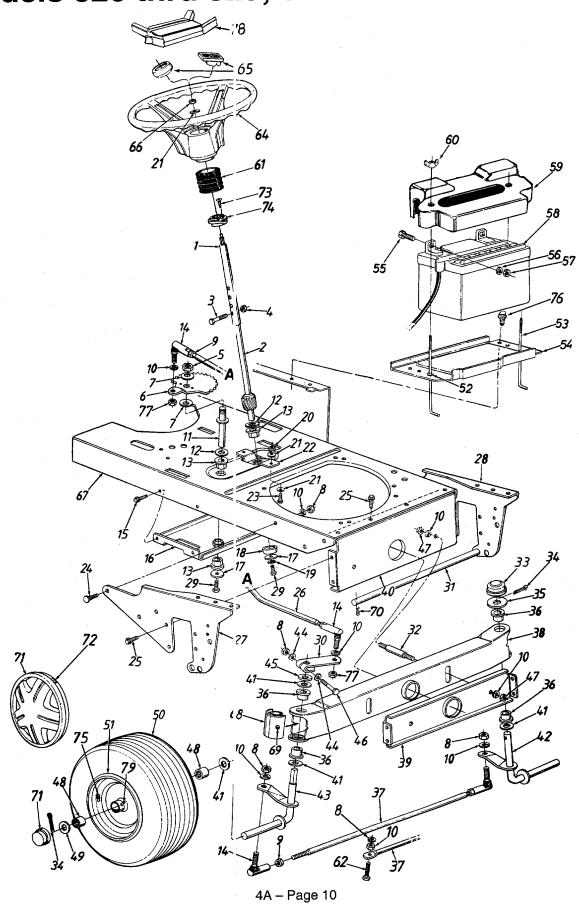

PARTS LIST FOR 800 SERIES GARDEN TRACTORS


	REF. NO.	PART NO.	CODE	DESCRIPTION	REF.	PART	CODE	DESCRIPTION
-	NO.				NO.	NO.		
	1	16512		Steering Column Ass'y.	43	16914		Front Axle Ass'y.—R.H.
	2	738-0763		Lower Steering Shaft	44	736-0286		Bowed Washer
	3	710-0958		Hex Bolt 1/4-20 x 1.31" Lg.	45	748-0160		Spacer .755" I.D. x 1.25" O.D.
	4	712-0324		Hex L-Nut 1/4-20 Thd.	46	710-0331		Hex Bolt 3/8-24 x 2.25" Lg.
	5	712-0318		Hex Jam Nut 5/8-18 Thd.*	47	712-0798		Hex Nut 3/8-16 Thd.*
1	6	717-0943A		Steering Gear Segment	48	700 0010		Bearing
	7	736-0317		Bell-Wash. 5/8" I.D. x 1.25" O.D.	49	736-0316 **		Fl-Wash71" I.D. x 1.5" O.D.
	8	712-0241		Hex Nut 3/8-24 Thd.	50	**		Wheel Ass'y. Comp. Tire Only
	9 10	712-0711 736-0169		Hex Jam Nut 3/8-24 Thd. L-Wash. 3/8" I.D.*	51	**		Rim Only
ı	11	738-0768		Steering Gear Segment Shaft	52	726-0271		Push Nut
	12	736-0700		FI-Wash64" I.D. x 1.24" O.D.	53	711-0222	!	Battery Hold Down Rod
	13	748-0227A		Hex Flange Brg63" I.D.	54	17635		Battery Plate
-	14	723-3018		Ball Joint Ass'y.	-	17634		Battery Plate (820, 825, 840 &
	15	710-0599		Hex Wash. Hd. TT-Tap Scr.				845 Only)
1				1/4-20 x .5" Lg.	55	710-0258		Hex Bolt 1/4-20 x .62" Lg.*
	16	16888A		Deck Idler Support Brkt.	56	736-0329		L-Wash. 1/4" I.D.*
	17	736-0343		FI-Wash33" I.D. x 1.25" O.D.	57	712-0287		Hex Nut 1/4-20 Thd.*
	18	750-0532		Spacer .985" I.D. x 1.25" O.D.	58	725-1635	1	Battery (275 Cold Crank Amps)
	19	736-0119		L-Wash. 5/16" I.D.*	59	731-1132		Battery Cover
	20	712-0123		Hex Nut 5/16-24 Thd.*	60	712-0113		Wing Nut Plastic 1/4-20 Thd.
ŀ	21	736-0242		Bell-Wash345" I.D. x .88" O.D.	61	731-0954		Steering Bellow (Style 0, 4, 5, 6, 9)
ı	22	16894		Bearing Retainer Brkt.	62	731-0559		Steering Bellow (Style 8)
	23 24	710-0157 710-0793		Hex Bolt 5/16-24 x .75" Lg.   Ribbed Neck Bolt 3/8-24 x .8" Lg.	64	710-0459 731-0805		Hex Bolt 3/8-24 x 1.5" Lg. (Gr. 5) Steering Wheel (3 Spoke)†
	25 25	710-0793		Hex Wash. TT-Tap Scr.	04	731-0806A		Steering Wheel (4 Spoke)†
	23	710-0004		5/16-18 x .62" Lg.		731-1406		Steering Wheel (3 Spoke)††
	26	747-0579		Steering Drag Link (Used	65	731-0220		Steering Wheel Cap (Round)
				w/Non-Adjustable Tie Rod)		731-1459		Steering Wheel Cap (Sq.—MTD)
		747-0899		Steering Drag Link (Used		731-1460		Steering Wheel Cap (Square—
				w/Adjustable Tie Rod)				No Logo)
	27	16896B	N	Pivot Bar Side Plate—R.H.	66	712-0237		Hex L-Nut 5/16-24 Thd.
	28	16897B	N	Pivot Bar Side Plate—L.H.	67	17359B		Lower Frame
	29	710-0538		Hex Bolt 5/16-18 x .62" Lg.	68	731-1049		Pivot Bar End Cap (Optional)
	30	683-0061		Steering Arm	69	737-0280		Grease Fitting (Optional)
	31	738-0777		Deck Connecting Rod	70	714-0149B	1	Internal Cotter Pin
	32	738-0775		Pivot Bar Shld. Bolt 3/8-16 x 5/8"	71	731-0484A		Hub Cap
	33	721 04944		Lg. Cap		734-1615 734-1614		Spoked Hub Cap (Gray—Opt.) Spoked Hub Cap (Beige—Opt.)
	34	731-0484A   714-0121		Cap Cotter Pin 5/32" Dia.		734-1014		Spoked Hub Cap (Beige—Opt.) Spoked Hub Cap (Yellow—Opt.)
	35	736-0316		Flat Washer	72	727-0425A		Spring Clip (Optional)
	36	741-0523		Flange Brg757" I.D.	73	710-0837		Oval Hd. CrSunk Scr. #10 x
	37	747-0721		Tie Rod 20.25" Lg. (Adjustable)	'-	,		5/8" Lg. (Used on Style 8)
		747-0862		Tie Rod 21.83" Lg. (Non-	74	741-0356		Flange Brg89" I.D. x 1.36"
				Adjustable)				O.D. (Used on Style 8)
	38	16843		Pivot Bar Assy.	75	**		Air Valvè
	39	16889		Pivot Bar Support Brkt.—Front	76	710-0776A		Hex AB-Tap Scr. 1/4 x .62" Lg.
	40	16890		Pivot Bar Support Brkt.—Rear	77	712-0446		Hex Jam L-Nut 3/8-24 Thd.
	41	736-0188		FI-Wash76" I.D. x 1.49" O.D.	78	731-0955 **		Steering Wheel Insert (Optional)
	42	16915		Front Axle Ass'y.—L.H.	79	^*		Grease Fitting

†Uses Round Steering Wheel Cap ††Uses Square Steering Wheel Cap

Round	Square
Shoulder	Shoulder


\*\*FRONT WHEEL CHART

Description	16" x 6.5" Round Shoulder	16" x 6.5" Square Shoulder
Wheel Ass'y. Comp.	734-1500A	634-0084
Tire Only	734-0275	734-1727
Rim Only	634-0067	634-0067
Bearing	741-0516	741-0516
Air Valve	734-0255	734-0255
Grease Fitting	737-0280	737-0280

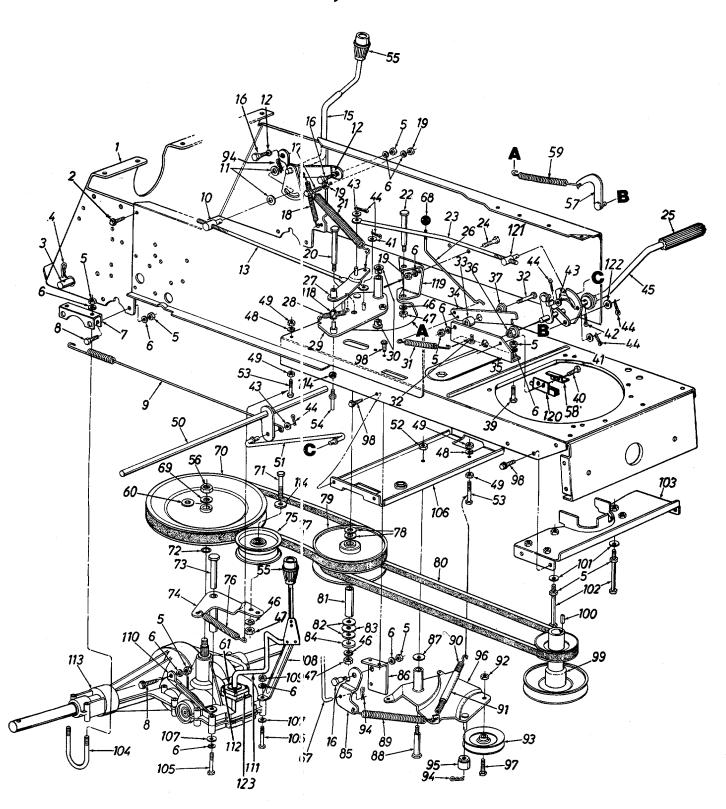

PARTS LIST FOR 800 SERIES GARDEN TRACTORS

`	PARTS LIST FOR 800 SERIES GARDEN TRACTORS								
REF. NO.	PART NO.	CODE	DESCRIPTION	REF. NO.	PART NO.	CODE	DESCRIPTION		
1	17343		Hitch Plate	59	732-0698		Ext. Spring 5.2" Lg.		
2	710-0726		Hex AB-Tap Scr. 5/16" x .75"	60	736-0156		FI-Wash635" I.D. x 1.12" O.D.		
3	738-0482		Hitch Rod	61	718-0256		Shift Snout		
4	714-0147		Hitch Pin Clip	67	Britain		Deck Control Rod (Refer to		
5	712-0267		Hex Nut 5/16-18 Thd.*				Style Pages)		
6	736-0119		L-Wash. 5/16" I.D.*	68	720-0166		Ball Knob Brake		
7	17340		Transaxle Bracket	69	736-0427		Bell-Wash. 9/16" I.D. x 1.25"		
8	710-3008		Hex Bolt 5/16-18 x .75" Lg. (Gr. 5)	70	756-0534		V-Pulley 91/4" O.D.		
9	732-0601		Brake Extension Spring	71	710-0539		Hex Bolt 3/8-24 x 1.75" Lg.		
10	711-0723A		Adjustment Ferrule 3/8-24 Thd.	72	732-0614		Wire Ring		
11	736-0267		FI-Wash385" I.D. x .87"	73	738-0769		Shid. Bolt 5/16-24 Thd.		
12	736-0141		Spr. Wash445" I.D. x .75" O.D.	74	16904		Idler Brkt. Ass'y.		
13	747-0729		Speed Control Link (Rear)	75 76	756-0542		Flat Idler 3.5" O.D.		
14	736-0192		Fl-Wash531" I.D. x .94" Speed Selector Lever Ass'y.	77	732-0384 754-0362		Extension Spring 6.12" Lg. V-Belt		
16	647-0011 738-0296		Shid. Bolt .437" Dia. x .162"	78	736-0414		Teflon Washer 1.20" O.D.		
17	710-0672		Hex Bolt 5/16-24 x 1.25" Lg.	79	717-0945		Variable Speed Pulley 6" Dia.		
18	732-0429A		Extension Spring 3.9" Lg.	80	754-0358		V-Belt		
19	712-3057		Hex Nut 5/16-24 Thd. (Gr. 5)	81	738-0778		Pivot Bushing		
20	710-0620		Hex Bolt 3/8-24 x 4.5" Lg.	82	736-0355		FI-Wash56" I.D. x 1.0" O.D.		
21	732-0603		Extension Spring 11" Lg.	83	741-0405		Thrust Brg56" I.D. x 1.25"		
22	738-0779		Shld. Bolt .625" Dia. x 3.5" Lg.	84	17485		Retainer Čup		
23	747-0726		Speed Control Link (Front)	85	13887		Deck Control Pivot Brkt.		
24	710-0157		Hex Bolt 5/16-24 x .75" Lg.	86	13833		Parking Brake Mtg. Brkt.		
25	735-0196		Foot Pad	87	736-0105		Bell-Wash38" I.D. x .88" O.D.		
26	747-0722		Parking Brake Link	88	738-0129		Shld. Bolt .498" Dia. x 2.05"		
27	17914		Variable Speed Torque Brkt.	89	732-0478		Extension Spring 6.12" Lg.		
. 00	700 0560		Ass'y.	90	732-0308		Extension Spring 6.37" Lg.		
28	732-0568 17908		Extension Spring 2.59" Lg.	91 92	731-0483 712-0214		Convoluted Conduit 4" Lg. Hex Cent. L-Nut 3/8-24 Thd.		
30	741-0495		Pulley Plate Ass'y. Flanged Brg630" I.D.	93	756-0293A		V-Belt Idler		
31	732-0395		Extension Spring 2.51" Lg.	94	714-0104		Internal Cotter Pin		
32	710-0528		Hex Bolt 5/16-18 x 1.25" Lg.*	95	748-0278		Spacer		
33	750-0214		Spacer .34" I.D. x .88"	96	14076A		Idler Brkt. Deck Ass'y.		
34	16980		Brake Lockout Bracket	97	710-0459		Hex Bolt 3/8-24 x 1.5" Lg.		
35	16924A		Clutch Ass'y. Mtg. Bracket	98	710-0599		Hex TT-Tap Scr. 1/4-20 x .5"		
36	741-0225		Hex Flange Brg634" I.D.	99	756-0531A		Engine Pulley		
37	748-0234		Shld. Spacer .5" Dia.	100	714-0118		Sq. Key 1/4 x 1.5" Lg.		
38	736-0187		Fl-Wash64" I.D. x 1.24"	101	736-0242		Bell-Wash345" I.D. x .88"		
39	710-0118		Hex Bolt 5/16-18 x .75" Lg.*	102	710-0833		Hex Bolt 5/16-18 x 5.25" Lg.		
40	710-0436		Hex B-Tap Scr. #10 x 5/8 Lg.	103	17358D		Belt Keeper Brkt. Ass'y.		
41	736-0185		FI-Wash406" I.D. x .75" O.D.	104	711-0829		U-Bolt 5/16 24 x 2 25" L a		
42	714-0115 736-0275		Cotter Pin 1/8" Dia. Fl-Wash34" I.D. x .68" O.D.	105 106	710-0593 16888A		Hex Bolt 5/16-24 x 2.25" Lg. Deck Idler Support Brkt.		
44	714-0111		Cotter Pin 3/32" Dia.	107	736-0264		FI-Wash344" I.D. x .62" O.D.		
45	17910		Foot Pedal Ass'y.	108	16979		Front Trans. Support Brkt.—L.H.		
46	736-0169		L-Wash. 3/8" I.D.*	109	712-0123		Hex Nut 5/16-24 Thd.*		
47	712-0241		Hex Nut 3/8-24 Thd.	110	16978		Front Trans. Support Brkt.—R.H.		
48	736-0329		L-Wash. 1/4" I.D.*	111	618-0155		Shift Lever Ass'y. Complete		
49	712-0287		Hex Nut 1/4-20 Thd.*	112	710-0886		Hex Flange Bolt 1/4-20 Thd.		
50	17349		Brake Link Bracket	113	618-0156		2-Speed Transmission Comp.		
51	747-0724		Front Brake Rod Link	114	736-0258		Fl-Wash. 3/8" I.D. x 1.0" O.D.		
52	712-0375		Hex Cent. L-Nut 3/8-16 Thd.	118	741-0419		Nyliner Flanged Brg.		
53	710-0501		Hex Bolt 1/4-20 x 2.0" Lg.	119	17180		Variable Speed Support Brkt.		
54	711-0828		Belt Guard Pin Shift Knob	120 121	725-1657 711-0832		Safety Switch (Clutch)		
55 56	720-0218 712-3035		Hex Jam Nut 9/16-18 Thd.	122	711-0832	1	Adjustment Ferrule 3/8-24 Thd. FI-Wash344" I.D. x .62" O.D.		
57	17912		Foot Pedal Brkt. Ass'y.	123	721-3033		O-Ring (Not Shown)		
ı 58	17962		Switch Plate	0	, <u></u> , 0000		O Tang (Not Onlown)		
						L			

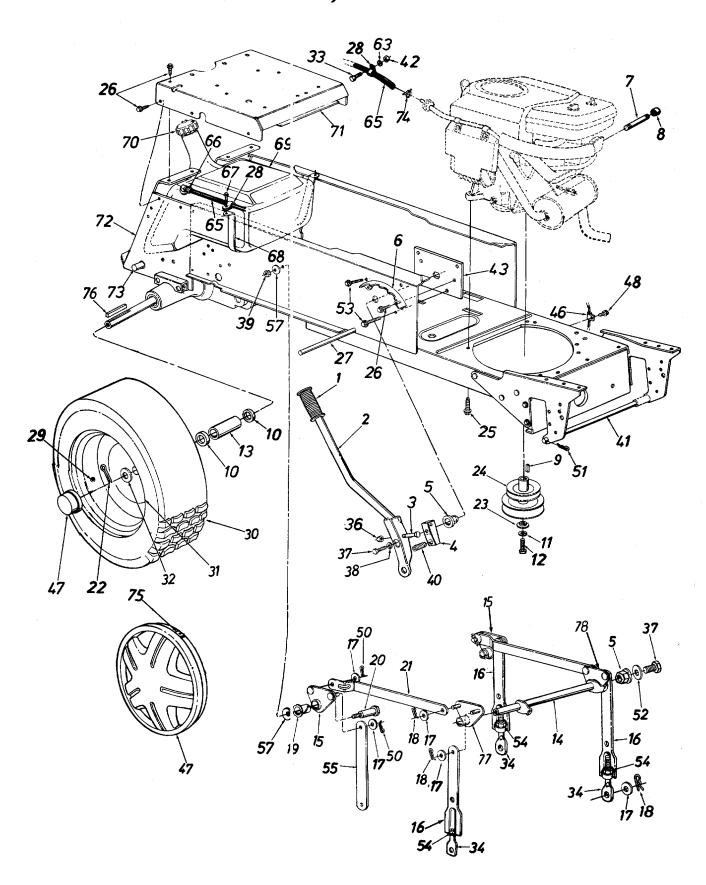

#### PARTS LIST FOR 800 SERIES GARDEN TRACTORS


REF. NO.	PART NO.	CODE	DESCRIPTION	REF. NO.	PART NO.	CODE	DESCRIPTION
1	720-0233		Grip	37	710-0237		Hex Bolt 5/16-24 x .62" Lg.*
2	17282		Lift Handle Ass'y.	38	736-0119		L-Wash. 5/16" I.D.*
3	710-0442		Hex Bolt 5/16-18 x 1.5" Lg.*	39	712-0181		Hex Top L-Nut 3/8-16 Thd.
4	748-0274A		Lift Shaft Drive	40	732-0369		Compression Spring
5	741-0225		Plastic Hex Brg. 5/8" I.D.	41	738-0777		Deck Connecting Rod
6	14231		Index Brkt. Deck Lift	42	712-0287		Hex Nut 1/4-20 Thd.*
7	737-0164		Pipe Nipple 3/8-18 Npt.	43	14170		Index Brkt. Reinforcement Plate
8	737-0143		Pipe Cap 3/8-18 Npt.	46	726-0273		Mounting Clamp
9	714-0118		Sq. Key 1/4" x 1/4" x 1.50" Lg.	47	731-0556		Hub Cap
10	736-0163		Fl-Wash. 1.03" I.D. x 1.62" O.D.	, ,	734-1617		Spoked Hub Cap (Gray—
11	736-0171		L-Wash. 7/16" I.D.				Optional)
12	710-0757		Hex Scr. 7/16-20 x 1.50" Lg.		734-1789		Spoked Hub Cap (Yellow-
13	750-0762		Spacer 1.0" I.D. x 1.25" O.D.				Optional)
14	683-0101	Ν	Lift Shaft Ass'y.	48	710-0599		Hex Wash, Hd. TT-Tap Scr.
15	13895		Lift Pivot Brkt. Ass'y.				1/4-20 x .5" Lg.
16	17303		Adj. Deck Lift Link	50	714-0111		Cotter Pin .09 Dia. x 1.0" Lg.
17	736-0192		FI-Wash. 1/2" I.D. x 1.00"	51	714-0149B		Int. Cotter Pin
			O.D. x .090"	52	736-0231		Flat Wash34" I.D. x 1.12"
18	714-0101		Hairpin Cotter				O.D. x .125"
19	741-0591		Flange Brg. 5/8" I.D. x .88" Lg.	53	710-0600		Hex Wash. Hd. AB-Tap Scr.
20	738-0445		Shld. Bolt 5/8" Dia. x .96"				5/16-24 x .5" Lg.
			Lg. 3/8-16	54	712-0206		Hex Nut 1/2-13 Thd.
21	13790		Connecting Link	55	14399		Deck Link
22	714-0142		Cotter Pin 3/16" Dia. x 1.5" Lg.	56	736-0264		Fl-Wash344" I.D.
23	736-0322		Flat Wash44" I.D. x 1.25"	57	736-0219		Bell-Wash4" I.D. x 1.13" O.D.
1			O.D. x .17"	60	710-0118		Hex Bolt 5/16-18 x .75" Lg.*
24	756-0531A		Two-Step Engine Pulley	63	736-0329		L-Wash. 1/4" I.D.*
, 25	710-0502A		Hex Wash. Hd. Scr. 3/8-16 x	65	751-0535-4	6	Fuel Line 46" Lg.
			1.25" Lg.	66	726-0205		Hose Clamp
26	710-0726		Hex Thd. Rolling Scr. 5/16-18	67	710-0776A		Hex AB-Tap Scr. 1/4 x .62" Lg.
			_ x .75" Lg.	68	17424		Fuel Tank Strap
27	738-0435		Running Board Rod	69	751-0566		Gas Tank
28	726-0272		Clamp	70	751-0531B		Gas Gauge
29	**		Air Valve	71	16848C		Seat Plate
30	**		Rear Wheel Ass'y. Comp.	72	17343		Hitch Plate
	**		Tire Only	73	738-0482		Hitch Rod
31	1		Rear Wheel Rim Only	74	726-0272		Hose Clamp
32	736-0345		Flat Washer	75	727-0425A		Spring Clip (Optional)
33	710-0258		Hex Bolt 1/4-20 x .62" Lg.	76 77	714-0120 683-0098	N	Sq. Key 1/4" x 3" Lg. Pivot Brkt. Ass'y.—R.H.
34	711-0817		Eye Bolt Adj. Link 1/2-13 Thd. Hex Cent. L-Nut 5/16-18 Thd.	78	683-0098	N N	Pivot Brkt. Ass'y.—R.H. Pivot Brkt. Ass'y.—L.H.
30	712-0158		HEX Cent. L-Nut 5/16-16 1110.	/0	000-0097	IN	I IVUL DIKL ASS Y.—L.A.

<sup>\*</sup>For faster service obtain standard nuts, bolts and washers locally. If these items cannot be obtained locally, order by part number and size as shown on parts list.

# Round Square Shoulder

#### \*\*REAR WHEEL CHART

Description	23" x 9.5" Round Shoulder	23" x 9.5" Square Shoulder
Wheel Ass'y. Comp.	734-1005A	634-0086
Tire Only	734-0322	734-1728
Rim Only	734-1015	734-1015
Air Valve	734-0255	734-0255

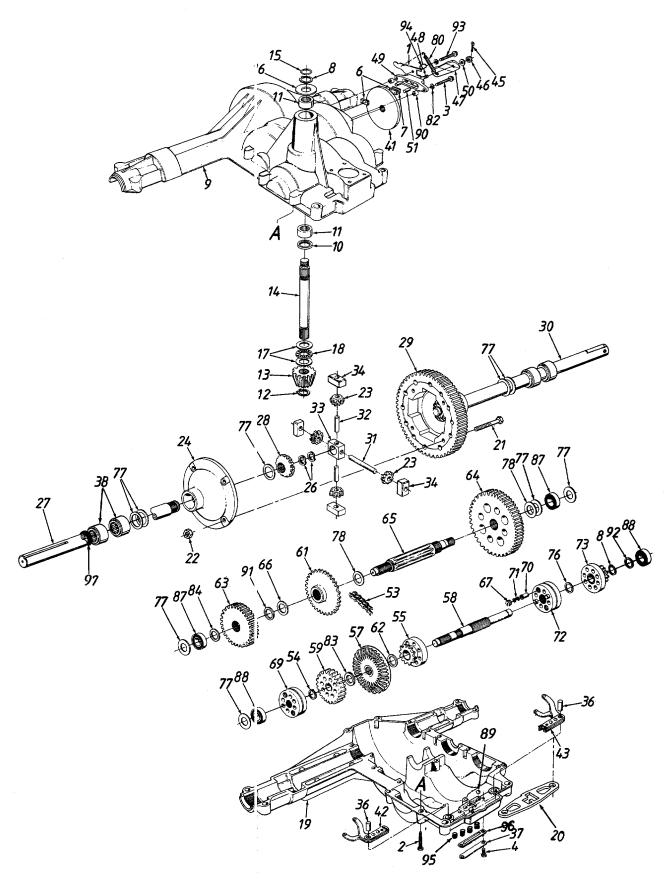


PARTS LIST FOR MODEL 618-0156 TRANSAXLE

REF. NO.	PART NO.	CODE	DESCRIPTION	REF. NO.	PART NO.	CODE	DESCRIPTION
1	17434A		Brake Return Bracket	49	717-1179		Brake Yoke
2	710-0809		Hex Bolt 1/4-20 x 1.25" Lg.	50	736-0371		Fl-Wash. 11/32" I.D. x 7/8" O.D.
3	710-3201		Hex Bolt 1/4-20 x 1.5" Lg. (Gr. 5)	51	741-0343		Brake Actuating Pin
4	710-0599		Hex Wash. Tap Scr. 1/4-20 x .5"	53	713-0326		#420 Chain 1/2 Pitch x 28 Links
			Lg.	54	716-0133		Retainer Ring
6	717-0678		Brake Puck	55	717-1141		Reverse Sprocket Ass'y.
7	717-0682		Puck Plate	57	717-1157		Bevel Gear 47T
8	716-0171		Retainer Ring	58	711-0860		Drive Shaft
9	619-0013		Upper Housing	59	717-1174		Spur Gear Ass'y.
10	721-0253		Oil Seal	61	717-1182		Sprocket 22T
11	741-0525		Needle Brg. 5/8" I.D. x 7/8" O.D.	62	736-0421		Fl-Wash81" I.D. x 1.18" O.D.
12	716-0114		Snap Ring	63	717-1155		Spur Gear 31T
13	717-1133		Input Pinion 15T	64	717-1156		Spur Gear 45T
14	717-1134		Input Shaft	65	717-1158		Output Shaft 9T
15	732-0614		Wire Ring	66	717-1172		Spacer
17	736-0419		Thrust Washer	67	718-0183		Shift Spring Plug
18	741-0469		Thrust Bearing	69	717-1167B		Forward Shift Collar
19	717-1161		Lower Housing	70	717-1184		Drive Pin
20	718-0258		Lockout Plate	71	732-0590A		Drive Spring
21	710-0151		Hex Bolt 3/8-24 x 2.0" Lg.*	72	717-1168B		Creeper Shift Collar
22	712-3054		Hex L-Nut 3/8-24 Thd. (Gr. 5)	73	717-1193	:	Creeper Collar Plate Ass'y.
23	717-1120		Differential Gear 10T	76	736-0353		Fl-Wash65" I.D. x .97" O.D.
24	717-1147		Differential Housing Cover Ass'y.	77	***		FI-Wash. (See Below)
26	716-0172		Retainer Ring	78	736-0424		Fl-Wash. 1.0" I.D. x 1.56" O.D.
27	717-1112		Axle R.H.	80	732-0545		Ext. Spring 1.14" Lg.
28	717-1119		Differential Gear 14T	82	736-0329		L-Wash. 1/4" I.D.*
29	717-1159		Differential Bull Gear 60T	83	736-0349		Fl-Wash. 5/8" I.D. x 1.0" O.D.
30	717-1111		Axle L.H.	84	736-0422		Fl-Wash68" x 1.12"
31	717-1173		Cross Shaft	87	741-0124		Ball Brg669" I.D.
33	717-1178		Cross Shaft—Special	88	741-0524		Ball Bearing
	717-1180		Differential Pinion Block	90	750-0555		Spacer .254" I.D. x .5" O.D.
34 36	717-1190 717-1138		Differential Thrust Block	91	736-0333		Fl-Wash69" I.D. x 1.06" O.D.
37	717-1138		Shift Pin	92			FI-Wash. (See Below)
38	741-1143		Spring Plate	93	710-1225		Hex Wash Hd. Patch Bolt
41	717-1177		Axle Bearing Ass'y. Brake Disc		750,0000		1/4-20 x 2-1/4" Lg.
42	717-1177			94	750-0893		Spacer .256" I.D. x .75" O.D.
43	717-1186		Shift Arm Ass'y.—R.H.	95	732-0496		Detent Spring
45	714-0111		Shift Arm Ass'y.—L.H. Cotter Pin 3/32" Dia.	96	717-1148		Spring Plate Shim
46	712-0335		Castle Nut 5/16-24 Thd.	97	721-0258		Seal Shall Basing Course 44
47	717-0333		Brake Actuating Arm		737-0148		Shell Darina Grease 14 oz. Tube
48	717-0706		Sq. Hd. Bolt 5/16-24 Thd.				(32 oz. Req'd.)
70	111-0190	<u></u>	oq. 11u. Bult 3/10-24 11lu.				

```
** Ref. No. 16 736-0335 FI-Wash. 5/8" I.D. x 1.25" O.D. x .060" Thk. 736-0336 FI-Wash. 5/8" I.D. x 1.0" O.D. x .030" Thk. 736-0337 FI-Wash. 5/8" I.D. x 1.0" O.D. x .040" Thk. 736-0423 FI-Wash. 1" I.D. x 1.56" O.D. x .010" Thk. 736-0431 FI-Wash. 1" I.D. x 1.56" O.D. x .015" Thk. 736-0424 FI-Wash. 1" I.D. x 1.56" O.D. x .020" Thk. 736-0420 FI-Wash. 1" I.D. x 1.56" O.D. x .040" Thk. 736-0336 FI-Wash. 5/8" I.D. x 1.0" O.D. x .020" Thk. 736-0337 FI-Wash. 5/8" I.D. x 1.0" O.D. x .030" Thk. 736-0337 FI-Wash. 5/8" I.D. x 1.0" O.D. x .040" Thk.
```

## Deck "H"

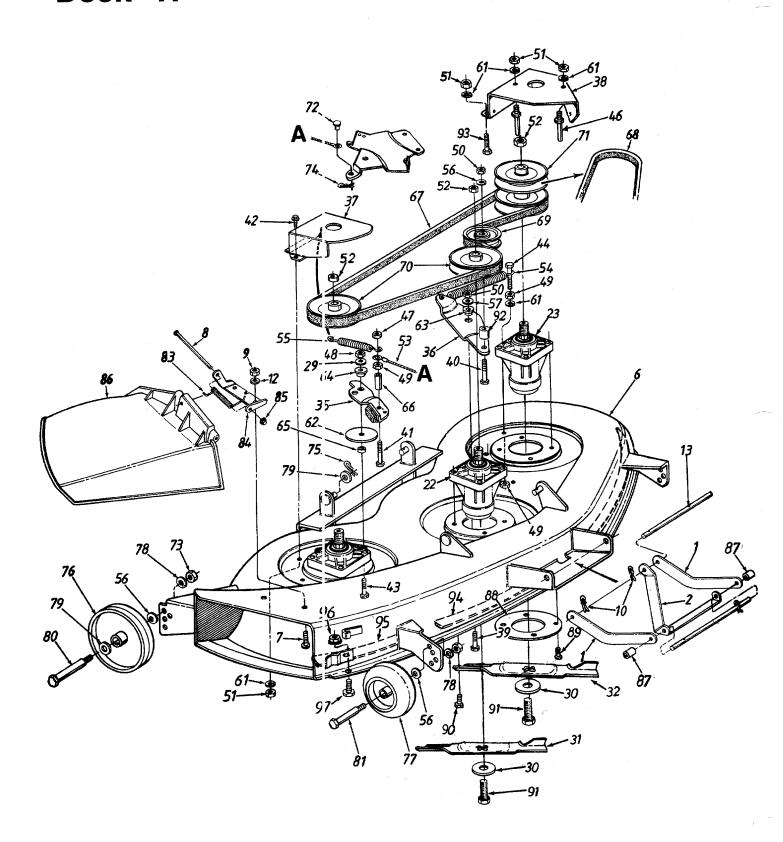


#### Deck "H"

#### PARTS LIST FOR 46" MOWING DECK

NC		CODE	PARTS LIST FO	R	EF.	PART		
1			Deck Stabilizer		0.	NO.	COD	DESCRIPTION
2	17264		Diagonal Brace		56	736-0105		Roll Mach Coll ( D
6	683-0052		16" Dook Assis O		57	736-0331		Bell-Wash38" I.D. x .88" O.D
	683-0053		46" Deck Ass'y. Comp.	- 1 (	61	736-0329		Deli-wash39"   D x 1 12" \ 1
	683-0054		46" Deck Ass'y. Comp. (Style		62	736-0416	1	L-vvasn, 1/4" []) *
	300 0004		40 Deck Assiv. Comp		63	738-0347	1	Fl-Wash. 5/16" I.D. x 3" O.D.†
7	710-0258		(Electric Clutch)		64			Johna, Spacer 625" I D
8	711-0208		Hex Bolt 1/4-20 x 62" La		35	748-0234		Shid. Spacert
9	711-0792		ninge Pin			750-0214	1	Spacer .34" I.D.+
	712-0287		Hex Nut 1/4-20 Thd.*		66	750-0470	1	Spacer .326" I.D.+
10	714-0149B		Hairpin Clip		37	754-0349		V-Belt
12	736-0270	1	Bell-Wash. 1/4" I.D.		88	754-0350		V-Belt
13	738-0392		Deck Connection D		9	756-0627	1	Flidler Duller o an a -
22	618-0111		Deck Connecting Rod	7	0	756-0969	ł	FI-Idler Pulley 3.5" O.D.
23	618-0112		Spindle Ass'y. (R.H. & Center)	7	1	756-0977		Pulley 5.0" Dia.
29	736-0119	1	Spiriale Ass.V. (LH)	7		711-0701	l	Double Pulley 5.0" Dia.
30	736-0510	1	Lock Wash. 5/16" I.D.*	7		712-0798		Ulevis Pin 1/4" Dia y 53" la +
31	742-0543	1.	Bell-Wash, .47" ID v 15"	7.		712-0/98		1 1 1 6 × 1 1 1 1 2 / 8 - 1 6 1 1 1 1
<i>,</i>	742-0543	]	High Lift Blade 14.88" La	7		714-0104		Intern. Cotter Pin 5/16" Dia +
32	740 0745		(Middle)			714-0145		Intern. Cotter Pin 3/8 Dia.
2	742-0542		High Lift Blade 16.28" Lg.	7		734-0973	ı	Deck Wheel 5" Dia.
		j	(R.H. & L.H.)	7		734-3058B		Deck Wheel w/lnear 511 D
35	17116	1	Deck Brake Brkt. Ass'y.†	78		736-0169		Deck Wheel w/Insert 5" Dia. L-Wash. 3/8" I.D.*
6	17213	1 7	dler Bracket	79	9	736-0192		FLWooh 504" LD."
7	17258A		Selt Cover Buld But	80	) [	738-0533		Fl-Wash531" I.D.
8	783-0066		Belt Cover Brkt.—R.H.					Shoulder Bolt .498" Dia. x
9	710-0152		Belt Cover—L.H.	81	-	738-3056		1.64" Lg.
	710-0151	- 15	lex Bolt 3/8-24 x 1.0" Lg.	83		732-0602		Shoulder Bolt
	710-0559	) r	16X BOIT 3/8-24 x 2"   a	84		703-1693		Torsion Spring
_ !			iex Bolt 1/4-28 x 1 75" l a +	85		700-1093		Hinge Mtg. Brkt
-	710-0599	H	ex wash, Hd. Tan-Scr	86		726-0106		Push Nut
3	740 000	1	1/4-20 x 5" l a	00	1	731-1032		Chute Ass'y. Comp.
3	710-0624	H	ex Bolt 5/16-24 x 1.5" Lg.		1			(Incl. Ref. 8, 83, 84, 85, 86)
.			(Grade 5)†	87		750-0757		Spacer 5/8" I.D. x 7/8" O.D.
1	710-0698	İΗ	ex Bolt 1/4-28 x 1.5" Lg.	88		7982	i	Spindle Pointers are a Tri
3	711-0993	B	elt Guard Pin 1/4" Dia.	89	7	10-1261	.	Spindle Reinforcement Plate
7   1	712-0117	H	ex Cont I Nut 4/4 on The					Hex Wash. Hd. Scr. 5/16-18 x 1" Lg.
3   7	712-0123		ex Cent. L-Nut 1/4-28 Thd.†	90	7	10-1260		I LG.
)   7	712-0138		ex Nut 5/16-24 Thd.†	1		1200	l	Hex Wash. Hd. Scr. 5/16-18 x
	712-0241	1116	ex Nut 1/4-28 Thd.†	91	7	10-1262	1	./3 Lu.
	12-0241	He	ex Nut 3/8-24 Thd.	92	1 2	11-0242		Hex L-Bolt 7/16-20 x 1" Lg.
	12-0267	He	9x Nut 1/4-20 Thd *	93	١ 4.	10.0000	1	Spacer .38" [1]
	12-041/	He	X Flange L-Nut 5/16-19 Tha	94		10-0289		Hex Bolt 1/4-20 x 5" La
	27-0426	יום ו	ane Cable Assiv +			83-0141		Skirt—Center
1	27-0445	Bra	ake Cable Ass'y. (Style 9)†	95	78	33-0142		Skirt—Right Hand
7	32-0594A	Ex	tension Spring 6.17" Lg.	96	71	12-0271	- 1	Hex Sems Nut 1/4-20 Thd.
7	32-0429A	Fy	tension Spring 2.07" Lg.	97	71	10-0167		Carriago Polt 1/4-20 Ind.
—			tension Spring 3.97" Lg.†					Carriage Bolt 1/4-20 x .5" Lg.

†Not used on electric clutch models.


## Deck "P"

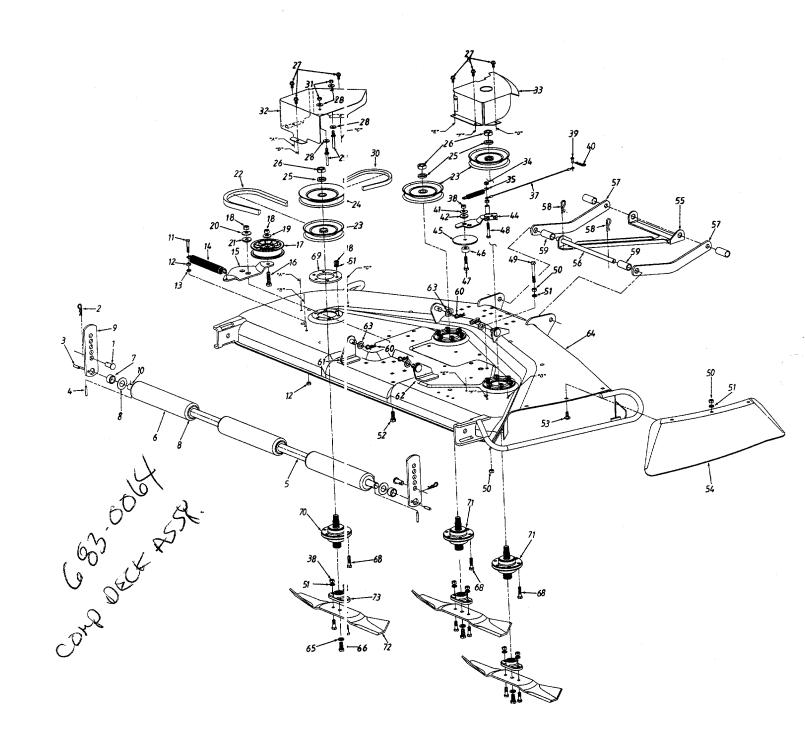

## Deck "P"


#### PARTS LIST FOR 50" MOWING DECK

REF.	DADT			Γ		 	
NO.	PART NO.	CODE	DESCRIPTION	REF. NO.	PART NO.	CODE	DESCRIPTION
1	711-0310		Clevis Pin	38	712-0123		Hex Nut 5/16-24 Thd.
2	714-0101		Hairpin Clip	39	711-0701		Clevis Pin
3	715-0108		Spring Pin 1/4" x 1" Lg.	40	714-0104		Hairpin Clip
4	715-0246		Spring Pin 3/16" x 1-1/4" Lg.	41	736-0425		Bell-Wash325" I.D.
5	750-0288		Spacer .82" I.D.	42	748-0234		Shid. Spacer
6	731-0335		Deck Roller	43	750-0470		Spacer .96" Lg.
7	750-0212		Spacer .75" I.D.	44	17116		Brake Ass'y.
8	736-0188		Fl-Wash76" I.D. x 1.5" O.D.	45	736-0416		Fl-Wash. 5/16" I.D. x .3" O.D.
9	12650		Height Adjuster	46	750-0214		Spacer .44" Lg.
10	738-0295		Roller Shaft	47	710-0624		Hex Bolt 5/16-24 x 1.5" Lg.
11	710-0698		Hex Bolt 1/4-28 x 1.5" Lg. (Gr. 5)				(Gr. 5)
12	712-0138		Hex Nut 1/4-28 Thd.	48	710-0559		Hex Bolt 1/4-28 x 1.75" Lg.
13	736-0329		L-Wash. 1/4" I.D.				(Gr. 5)
14	732-0594A		Ext. Spring 7.33" Lg.	49	710-0378		Hex Bolt 5/16-18 x 2.5" Lg.
15	783-0139		Idler Brkt.	50	712-0267		Hex Nut 5/16-18 Thd.*
	710-0459		Hex Bolt 3/8-24 x 1.5" Lg.	51	736-0119		L-Wash. 5/16" I.D.*
17	756-0627		Idler Pulley	52	710-0152		Hex Bolt 3/8-24 x 1" Lg.
	712-0241		Hex Nut 3/8-24 Thd.	53	710-0451		Carr. Bolt 5/16-18 x .75" Lg.
	736-0105		Bell-Wash. 3/8" I.D.	54	12649		Chute Guard
	736-0331		Bell-Wash39" I.D. x 1.13" O.D.	55	17264		Diagonal Brace
21	738-0347		Shid. Spacer .625" I.D.	56	738-0392		Connecting Rod
22 23	754-0291A		"V"-Belt	57	17347		Stabilizer Ľink
	756-0519		Deck Pulley	58	714-0149B		Hairpin Clip
	756-0604 736-0158		Upper Deck Pulley	59	750-0932		Spacer 1.75" Lg.
	712-0318		L-Wash. 5/8" I.D.	60	714-0145		Hairpin Clip
27	712-0316		Hex Jam Nut 5/8-18 Thd.	63	736-0192		FI-Wash. 1/2" I.D. x .93" O.D.
~	710-0599		Hex Wash. Hd. Scr. 1/4-20 x .5"	64	683-0060		Deck Ass'y.
28	736-0270		Lg. Bell-Wash. 1/4" I.D.	65	736-0217		L-Wash. 3/8" I.D.—H.D.
	711-0747		Belt Guard Pin	66	710-0877		Hex Bolt 3/8-24 x .88" Lg. (Gr. 5)
	754-0364		"V"-Belt	68	710-0672		Hex Bolt 5/16-24 x 1-1/4" Lg.
	712-0287		Hex Nut 1/4-20 Thd.	69	140404		(Gr. 5)
	783-0131		Belt Guard—L.H.	70	14249A 618-0119	NI.	Spindle Reinforcement Plate
	783-0130		Belt Guard—E.H.	71	618-0118	N N	Spindle Ass'y. (L.H.)
	712-0117		Hex L-Nut 1/4-28 Thd.	72	742-0171B	IN	Spindle Ass'ý. (R.H. & Center) Blade
	732-0429A		Ext. Spring 3.97" Lg.	73	748-0300		
	712-0138		Hex Nut 1/4-28 Thd.	74	710-0888		Blade Adapter
	727-0295		Brake Cable	′ 🕇	, 10-0000		Hex Bolt 5/16-24 x 1" Lg.

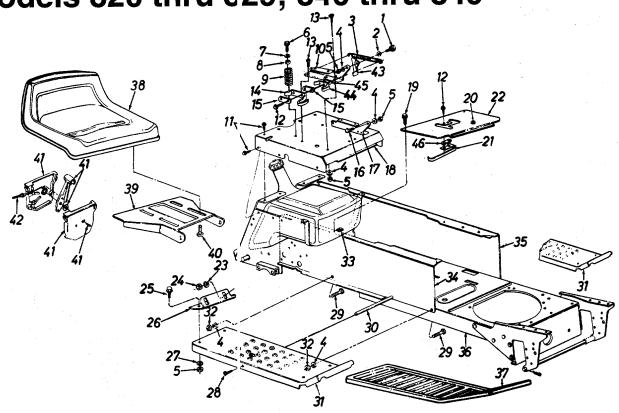

#### PARTS LIST FOR 800 SERIES GARDEN TRACTORS

REF.	PART	CODE	DESCRIPTION	REF.	PART	CODE	DESCRIPTION
NO.	NO.	30DL	520011111111	NO.	NO.		
1	738-0296		Shld. Bolt .437" Dia. x .162"	26	15846		Fender Bracket—R.H.
2	736-0141		Spr. Wash445" I.D.		15847		Fender Bracket—L.H.
3	732-0581B		Ext. Spring 5.31" Lg.		17406		Fender Bracket—R.H.
4	736-0119		L-Wash. 5/16" I.D.*				(Style 4, 6, 9)
5	712-0267		Hex Nut 5/16-18 Thd.		17407		Fender Bracket—L.H.
6	710-0601		Hex Wash, Hd. Tap Sor,				(Style 4, 6, 9)
"	7 10 0001		5/16-18 x .7" Lg.	27	736-0242	·	Beil-Wash345" I.D. x .88" O.D.
7	736-0159		Fl-Wash344" I.D.	28	710-0323		Truss Mach. Scr. 5/16-18 x .75"
8	722-0160		Bushing				Lg.
9	732-0588	-	Compression Spring	29	710-1012		Rib Neck Bolt 5/16-24 x .75" Lg.
10	17702		Seat Pivot Brkt. Support—R.H.	30	738-0435		Running Board Rod
111	710-0726		Hex Wash. Hd. AB-Tap Scr.	31	16922		Running Board—R.H.
''	/ (0 0/20		5/16 x .75" Lg.		16921		Running Board—L.H.
12	710-0227		Hex Wash. Hd. AB-Tap Scr.	32	712-0123		Hex Nut 5/16-24 Thd.
'-			#8 x .5" Lg.	33	726-0139		Speed Nut #10Z
13	710-1228		Torx Hd. AB-Tap Scr. 5/16-18 x	34	17360A		R.H. Side Frame
			.75" Lg.	35	17361B		L.H. Side Frame
14	725-1303		Spring Switch	36	17359B		Lower Frame
15	726-0279		Insulator Plate	37	731-1052		Rubber Foot Pad (Optional)
16	738-0155		Shld. Bolt .437" Dia. x .162"	38	757-0345		Seat 8-7/8" High
17	17701		Seat Pivot Brkt. Support—L.H.		757-0338		Seat 10-5/8" High
18	16848C		Seat Plate		757-0365		Seat 10-5/8" High (Yellow)
19	710-0351		Truss Mach. B-Tap Scr.		757-0350		Seat 14-1/4" High
			#10 x .5" Lg.	l	757-0372		Seat 14-1/4" High (Yellow)
20	731-0405		Snap Bushing	39	783-0039		Seat Pivot Bracket
21	725-1643		Reverse Safety Switch	40	710-0623		Hex Tap Scr. 3/8-16 x .75" Lg.
22	-		Shift Cover (Refer to Style	41	831-0823A		Throttle Control Box Ass'y.
			Sheet)	42	746-0634		Throttle Control Wire 35" Lg.
23	736-0329		L-Wash. 1/4" I.D.*	43	17239A		Seat Lift Bracket
24	712-0287		Hex Nut 1/4-20	44	725-1439		Seat Spring Switch   Insulator Boss Plate
25	710-0118		Hex Bolt 5/16-18 x .75" Lg.	45	726-0278		Insulator Boss Plate
				46	726-0320		Insulator Nut Flate

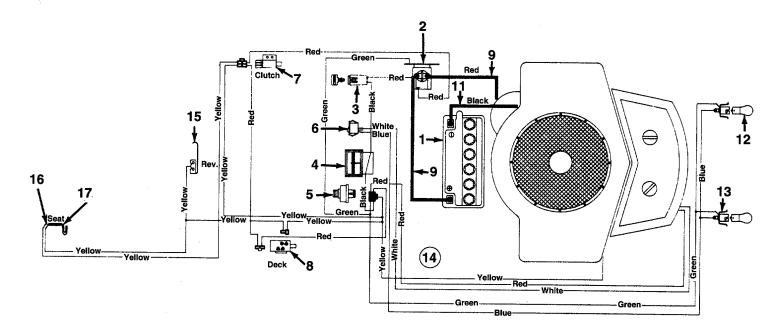

#### PARTS LIST FOR ELECTRICAL SYSTEM

REF. NO.	PART NO.	CODE	DESCRIPTION	REF. NO.	PART NO.	CODE	DESCRIPTION
<u> </u>	725-1635		Battery (275 Cold Crank Amps)	12	725-0963		Lamp
2	725-1426		Solenoid	13	725-1649		Socket (Style 0, 5, 6)
3	725-1625		Fuse 7.5 Amp		725-1650	İ	Socket (Style 4, 8, 9)
4	725-0925		Ammeter†	14	629-0114		Wire Harness Used w/Ammeter
5	725-0267		Ignition Switch				& Light Switch
6	725-0634		Light Switch†		629-0112		Wire Harness Used w/o
7	725-1657		Safety Switch (Clutch)				Ammeter & Light Switch
8	725-0465A		Safety Switch (PTO)	15	725-1643		Spring Switch (Reverse)
9	725-0561		Electric Wire 14" Lg.	16	725-1303		Spring Switch (Seat)
11	725-0996		Ground Wire 7.5" Lg.	17	725-1439		Spring Switch (Seat)

†Optional Parts

l l